

OPTIPOP R

CASSETTE CLEANER





FEATURES

- · Cleaning ribbon for wiping ferrule endfaces
- Cleaning ribbon is ultrasonically cut and washed in deionized water in cleaning room for high purity
- Cleaning ribbon weave traps micron sized dust particles while the strands in the weave for wicking up residues

SENKO CODE	NTT AT CODE	DESCRIPTION
CRC-RS-01	ATC-RS-01	Box of 6 replacement OPTIPOP R cassette Refills
CRE-01	ATC-RE-01	Standard Slot is good for all single fiber and female (no guide pins) MT based connector systems
CRE-02	ATC-RE-02	Two Slot is pitched for 6.25mm standard LC and MU duplex assemblies
CRE-03	ATC-RE-03	Male MT slot has backing to all male (<i>with guide pins</i>) MT based connector systems using 12F and 16F arrays
CRE-04	ATC-RE-04	Male MT-RJ Slot



OTIPOP R CASSETTE



How To Change the Refills in the OPTIPOP R Cassette

- 1 Use a flat head screw driver to loosen housing screw and pull side tab to open cassette housing.
- 2 Remove the old Pay Off spool and the Take Up spool.
- Insert attach cleaning ribbon from new spool to the Take Up spool and route the cleaning ribbon using the diagram.
 - Make sure the cleaning ribbon is underneath the shutter & cardboard insert and above the blue rubber backing pad.
- 4 Close cassette housing and reattach the housing screw.

RECOMMENDATIONS FOR GETTING OPTIMAL CLEANING

- **Only pull the trigger once to get a new section of cleaning ribbon.** The gear system of the OPTIPOP R Cassettes is designed to advance enough of the cleaning ribbon to get a completely new section into the cleaning window with a single engagement.
- **Do not try to reuse the cleaning ribbon.** Contamination removed from the first use of cleaning ribbon will be reapplied if an operator tries to flip over and reload the old cleaning back into the cassette.
- **If a wet-dry cleaning is needed, apply a small drop the cleaning fluid onto the cleaning ribbon.** Always start by putting the ferrule into the wet area on the ribbon and wiping towards the opposite side of cleaning window to finish in the dry section.

SENKO ADVANCED COMPONENTS, INC.

USA EAST 1-888-32-SENKO USA WEST 1-858-623-3300 TEXAS 1-972-661-9080 Sales-Americas@senko.com

South America

BRAZIL +55-21-3736-7065 Sales-Brazil@senko.com

Asia

HONG KONG +852-2121-0516 SHANGHAI +86-21-5830-4513 SHENZHEN +86-755-2533-4893 Sales-Asia@senko.com

Europe

UK +44 (0) 118 982 1600 ITALY +39 011 839 98 28 POLAND + 48 71 396 36 59 Sales-Europe@senko.com

Asia Pacific

AUSTRALIA +61 (0) 3 9755-7922 Sales-Asia-Pacific@senko.com Middle East North Africa DUBAI +971 4 8865160 Sales-MENA@senko.com

CALL 1-888-32-SENKO

TOKYO +81 (0) 3 5825-0911 Sales-Japan@senko.com