

SENKO PART NUMBER: **RMT-203**

Applications: ■ SN[®] connector assemblies ■ SN[®]-MT connector assemblies



Unlock/Lock:



To unlock:



Slide the lock towards the handle grips to unlock.

To Lock:

Hold the grips together and slide lock towards jaws.

**SN[®] Assembly
Insertion:**


Inserting SN[®] assembly into adapter example.

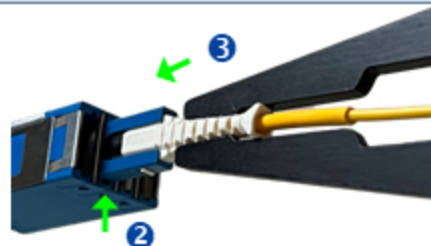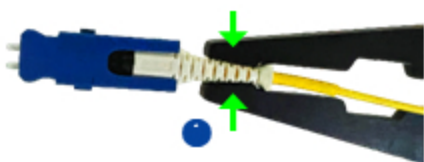

- 1 Place jaws to hold the SN[®] assembly's white push-pill boot.
- 2 Align the connector into the adapter or transceiver port opening.
- 3 Push the assembly forward. The assembly will snap in and make an audible "CLICK" when properly seated.

**SN[®] Assembly
Extraction:**

Extracting SN[®] assembly from OSFP optical transceiver example.

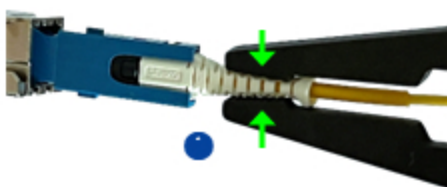

- 1 Place jaws to hold the SN[®] assembly's white push-pill boot.
- 2 Pull straight back to extract the SN[®] assembly.

TIP: Replace the protective end cap onto the SN[®] assembly to protect the end faces.

Please contact your local **SENKO sales representative** or email us at sales@senko.com for more information on the SN[®] Insert-Extract Tool; SN[®] and SN[®]-MT connectors; or any of our other cleaners, inspection, interferometry, and all the other connector maintenance products solutions that are available.

