



Ribbon Boots


01 Bare Ribbon



02 Bare Ribbon Short




11 Flat Ribbon Cable




2.0mm Round Boots

21 2.0mm Boot with Crimp




22 2.0mm Boot without Crimp




3.0mm Round Boots

31 3.0mm Boot




32 3.0mm Flex Angle




3.6mm Round Boots

41 3.6mm Boot




42 3.6mm Flex Angle



4.5/5.0/5.5 Round



51 4.5mm Boot



52 5.0mm Boot





53 5.5mm Boot

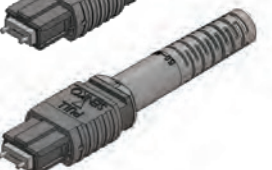



Note: When using Flex Angle Boot, always maintain the proper bend radius per the cable manufacturer's specification.


Ribbon Boots

- 00 Bare Ribbon 
- 01 Bare Ribbon Short 






2.0mm Round Boots

- 21 2.0mm Boot with Crimp 
- 22 2.0mm Boot without Crimp 

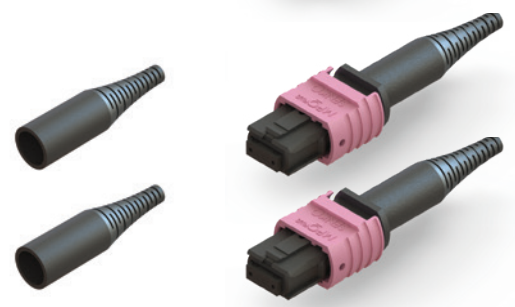



3.0mm Round Boots

- 32 3.0mm Flex Angle 
- 33 3.0mm Short 
- A1 3.0mm Boot 







3.6mm Round Boots

- 42 3.6mm Flex Angle 
- 46 3.6mm Short 



4.5/5.0/5.5 Round

- 51 4.5mm Boot 
- 52 5.0mm Boot 
- 53 5.5mm Boot 

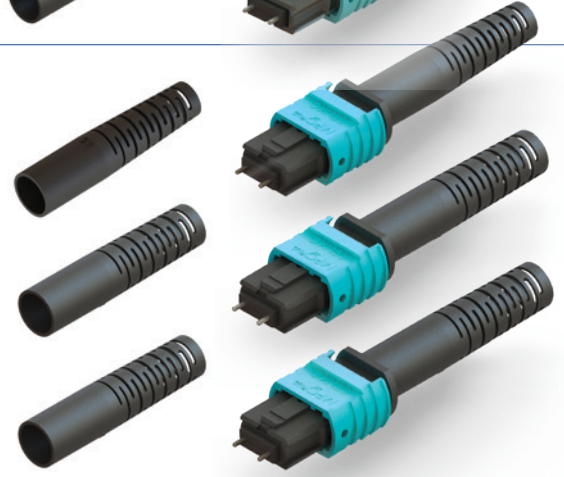

Note: When using Flex Angle Boot, always maintain the proper bend radius per E-3.3 the cable manufacturer's specification.