

ONE-CLICK® SN® DUPLEX

END FACE CLEANER FOR SN° DUPLEX CONNECTORS

TYPICAL APPLICATIONS INCLUDE

- Cable Assembly Production
- Field Installations with SN and IP 9 SN connectors
- Network Equipment Production

 QSFP DD Op
- Engineering and Research Labs
- Field installations with SIN and IF 9 SIN connectors
- QSFP DD Optical Transceiver Production and Maintenance
- Duel cleaning tips rotate and wipe in tandem Keyed features for precise alignment of the cleaning tips Cleans 500 SN Duplex (1000 end faces total) View of the cleaning tips **SENKO** Ergonomic handle SENKO PART NUMBER SCK-DC-SN DIMENSIONS (IN BOX) 5.2cm (2.0") Length: 26cm (10.2") Height: Width: 3.0cm (1.2") Weight: 57g (2oz) FEATURES Dual cleaning of end faces reduces cleaning times. Works for UPC and APC polished end faces. Self aligning cleaning tips for consistent cleaning Effective cleaning inserted into adapter ports and ٠ performance of unmated and in adapter end faces. transceiver ports in the up or down position. RoHS and REACH compliant with no shelf life or Cleaner locks up at end of life to alert operator. ٠ restrictions on storage or shipments Protected by US Patents 7,212,719 and 8,087,118 SN® is registered trademark of Senko Advanced Components. **ONE-CLICK®** is registered trademark of Fujikura Ltd. SENKO NEWS CHANNEL on YOU The How To Use Video Demonstration. Check Out the



ONE-CLICK[®] SN[®] DUPLEX end face cleaner



Cleaning Unmated SN Assemblies

- ① Open the lid on the end cap and insert the SN duplex connector.
- 2 Push the cleaner forward 1X until you hear the audible CLICK sound.

It is important to **always clean both ends** of the connector pair **before mating** to prevent accidental avoid cross contaminating both end faces.




Cleaning In Adapter SN and Transceiver Ports


- Remove end cap and insert yellow barrel of the cleaner into the adapter port or the transceiver port.
- 2 Push the cleaner forward 1X until you hear the audible CLICK sound.

TYPICAL PERFORMANCE




- 1. End face is touched to a finger tip and plugged into adapter.
- 2. Cleaner is engaged one time and checked to the IEC 61300-3-35 spec.

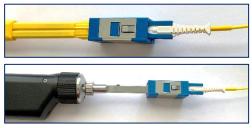

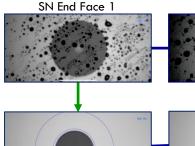

SN End Face 1 Cleaned 1X

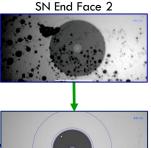

SN End Face 2 Cleaned 1X

SENKO ADVANCED COMPONENTS, INC.

AMERICAS

US EAST 1.888.32.SENKO US WEST 1.858.623.3300 TEXAS 1.972.661.9080

BRAZIL

BRAZIL +55.21.3736.7065 Sales-Brazil@senko.com

AUSTRALIA & PACIFIC REGION

Australia +61.0.3.9755.7922 Sales-Asia-Pacific@senko.com

JAPAN Sales-Americas@senko.com TOKYO +81.0.3.5825.0911

ASIA

Sales-Japan@senko.com

HONG KONG +852.2121.0516 Sales-Asia@senko.com SHANGHAI +86.21.5830.4513 SHEZHEN +86.755.2533.4893

www.senko.com

EUROPE UK + 44(0)1256 700880 Sales-uk@senko.com POLAND + 44(0) 7796444488 SPAIN & PORTUGAL + 34 678042829 Sales-Iberia@senko.com GERMANY + 49(0)15117683072 Sales-Germany@senko.com ITALY + 39 338 8919089 Sales-Italy@senko.com FRANCE + 44 7939364565 Salesfrance@senko.com OTHER + 44(0) 1256 700880 Sales-Europe@senko.com