

# SMART CLEANER MINI 1.25MM

End face click cleaner for 1.25mm based connectors

Part Number: **SCK-SS-M-C125**

**SENKO ADVANCED COMPONENTS** short click cleaner for cleaning 1.25mm end faces for connectors like the LC, SN, CS, ODC, ARINC 801 and many other connector systems.



- Self aligning using a push engagement.
- Short size for cleaning in confined spaces.
- RoHS and REACH compliant.
- Clean standard and many hardened connectors.

## TYPICAL APPLICATIONS



Field Installations



Data Centers



Central Office



FTTH Networks



FTTA Networks



Medical



R&D Centers




MIL-Aerospace

## KEY FEATURES

- 400 cleanings.
- Effective for wiping away dust and residues.
- Clean in adapter and unmated LC, SN, CS connectors.
- Cleans pin and socket end faces in hardened connector systems including the ARINC 801, ODC, MIL PRF 64266 (NGCON), Luxcis, and many other hardened connector systems.
- Cleans UPC and APC end faces.



Length (green end cap off):	107mm (4.2")
Length (green end cap on):	113mm (4.4")
Handle Diameter:	Ø23mm (0.9")
Weight:	13g

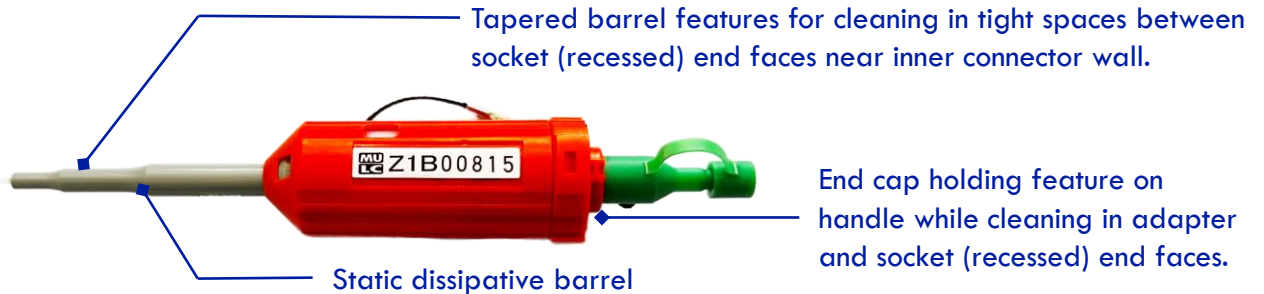

Cleaning tip protrudes 3mm for easier insertion into socket and adapters.



Tapered green end cap cleans pin (protruding) end faces near inner connector wall.

HOW TO: LC, SN, CS IN ADAPTER CONNECTORS

- 1 Place green end cap on handle.
- 2 Insert cleaner into the adapter port.
- 3 Push cleaner forward 1X.





Cleaning In adapter LC end faces.



HOW TO: CLEAN UNMATED LC, SN, CS CONNECTORS


- 1 Return green end cap onto the gray barrel.
- 2 Insert the connector into the green end cap.
- 3 Push cleaner forward 1X.

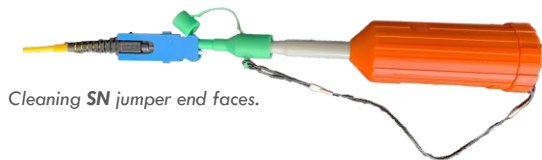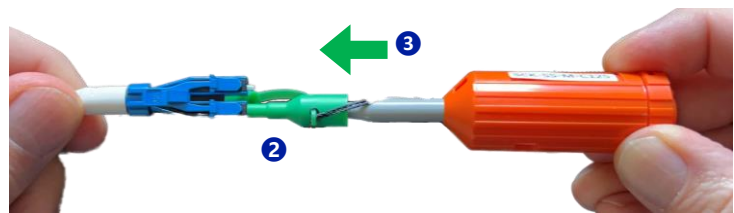

HOW TO: CLEAN ODC AND HARDENED END FACES

CLEANING SOCKET END FACES.

- 1 Place green end cap on handle.
- 2 Insert the white cleaning tip into the socket.
- 3 Push cleaner forward 1X.

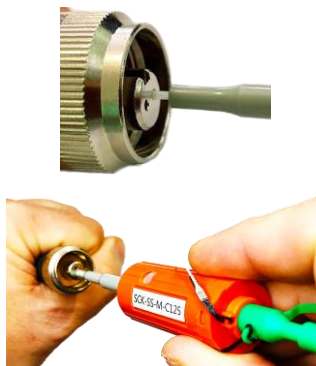

CLEANING PIN END FACES.

- 1 Return green end cap onto the gray barrel.
- 2 Align the green end cap onto the pin ferrule.
- 3 Push cleaner forward 1X.

