DATA SHEET



LC HD Connector

LC-HD CONNECTOR

Simplex, Duplex and Uniboot 913, 914 and 946 Series



The SENKO LC-HD connector's lever design utilizes a push-pull tab allowing for the connector to be inserted and disengaged easily from densely loaded panels without the need for special tools. Flexible pull tabs are also available with all offered in multiple lengths.

Because the SENKO LC-HD connector can be removed using a simple pull tab, it eliminates the need for finger access to the LC connector's latch mechanism, therefore LC adaptors can now be mounted much closer than spacing required in the past, achieving up to a 60% increase in panel density.

The low profile SENKO LC-HD, together with its pull tab, allows LC adaptors to be stacked with absolutely no vertical space, maximizing panel density and optimizing space utilization in network installations.

FEATURES

- · High density design
- · Compact form factor
- Pull-tab mechanism option
- Robust construction
- Fully compatible with IEC 61754-20

APPLICATIONS

- Data centers
- Telecommunications
- Enterprise networks
- Telecom infrastructure

KEY BENEFITS

- ✓ Increased density
- **✓** Simplifiedinstallation and maintenance
- **✓** Robust reliability
- **✓** Increased versatility
- ✓ Not tools required

Mechanical Data

	Value
Durability	< 0.2dB typical change, 500 matings
Fiber Count	Simplex / duplex (1 or 2 Fiber)
Cable Suitability	900 μm to 3 mm*
Ferrule Material	Zirconia

^{*} Custom sizes up to 5.5mm are available

Optical Data


	Singlemode				Multimode
	UPC		APC		MM
	Low Loss	Standard	Low Loss	Standard	Standard
Typical Insertion Loss (dB)*	0.05	0.08	0.07	0.10	0.10
Max. Insertion Loss (dB)*	0.15	0.20	0.15	0.25	0.20
Typical Return Loss (dB)*	≥55		≥65		≥25
Ferrule Diameter (µm)	125				127

^{*} Based on master grade jumper to low loss random mating test


Environmental Data

	Value
Operating Temperature	-40°C to +75°C
RoHS Compliance	Yes
REACH Compliance	Yes
Humidity Resistance	95%

Connector Drawing

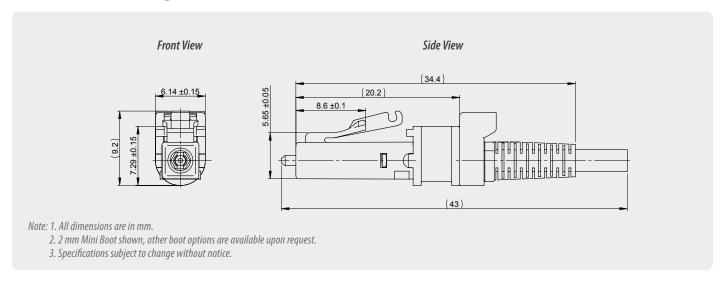



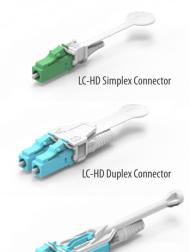

LC-HD Uniboot Connector



Note: 1. Pull tab must be purchased separately to complete the set


2. 900 µm boot available for 913P and 914P series only




Note: Pull tab must be purchased separately to complete the set



Pull-Tab Drawing

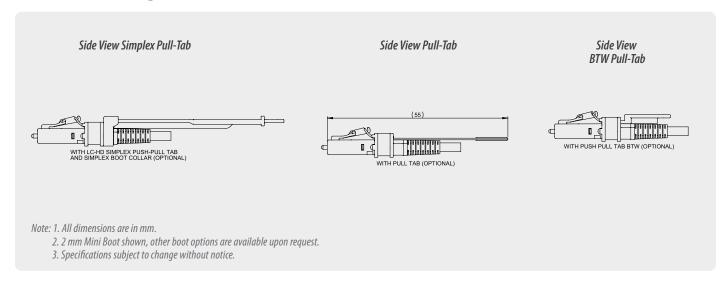

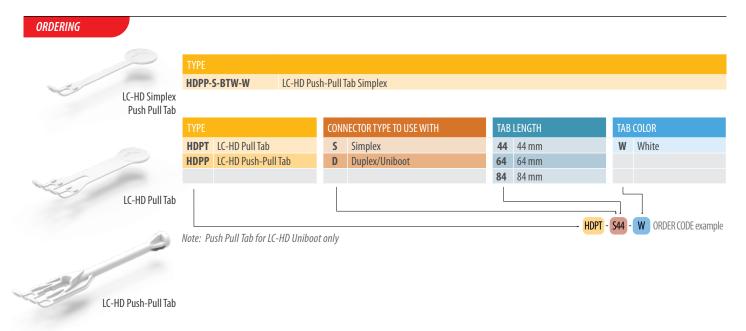



Accessories - Production/Cleaning



Accessories - Interferometry







sales@senko.com 1-858-623-3300 senko.com/contact